# MODEL / MODELE
# 103974

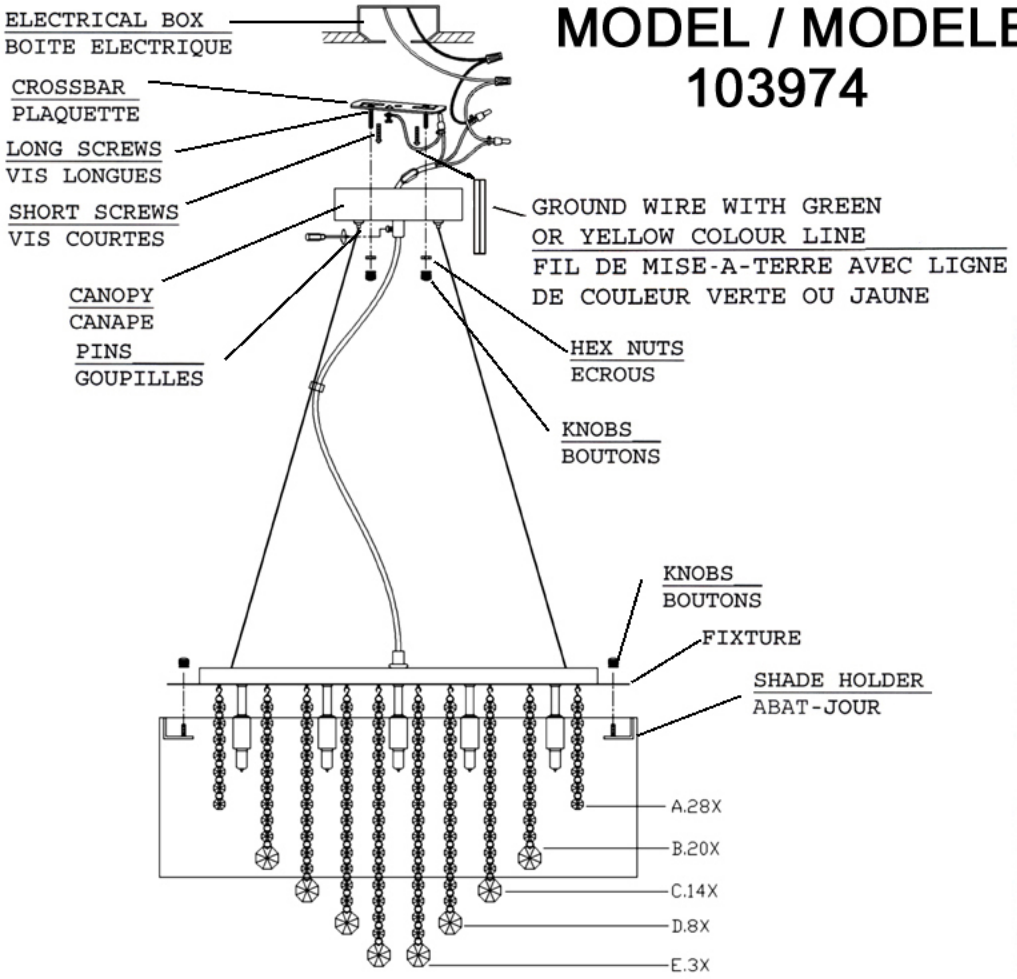


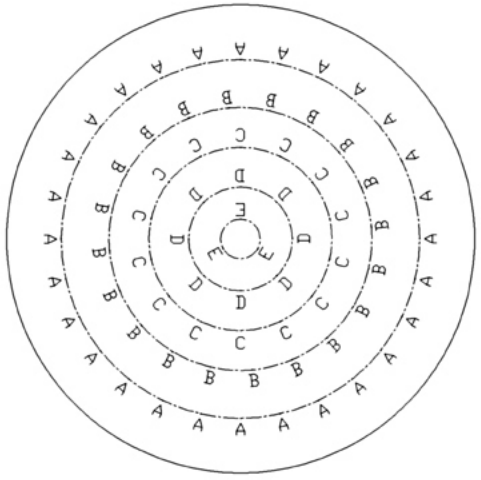

**NOTE:** THE FIXTURE HEIGHT CAN BE ADJUSTED BY PUSHING IN THE PINS AND SLIDING THE STEEL CABLES UP OR DOWN.

**MOUNTING INSTRUCTIONS**

1. TURN OFF THE POWER.
2. THREAD THE 2 LONG SCREWS INTO THE CROSSBAR, AND ATTACH THE CROSSBAR TO THE ELECTRICAL BOX WITH THE SHORTER SCREWS.
3. MAKE THE WIRE CONNECTIONS. CONNECT BLACK TO BLACK WIRE AND WHITE TO WHITE WIRE. ATTACH GROUNDING WIRE TO CROSSBAR GROUNDING SCREW.
4. ALIGN THE HOLES IN THE CANOPY WITH THE 2 LONG SCREWS IN THE CROSSBAR, AND PLACE THE CANOPY ONTO THE SCREWS. SECURE THE CANOPY IN PLACE WITH THE HEX NUTS AND KNOBS.
5. HANG THE STRANDS OF GLASS ONTO THE METAL LOOPS.
6. SECURE THE SHADE TO THE FIXTURE WITH THE KNOBS.

**NOTE:** LA HAUTEUR DE LA FIXTURE PEUT ETRE AJUSTER EN POUSSANT SUR LES GOUPILLES ET EN GLISSANT LES CABLES D'ACIER DE HAUT EN BAS.

**INSTRUCTIONS D'INSTALLATION**

1. COUPER LE COURANT.
2. INSERER LES 2 VIS LONGUES DANS LA PLAQUETTE ET JOINDRE LA PLAQUETTE A LA BOITE ELECTRIQUE AVEC LES VIS PLUS COURTES.
3. RACCORDER LES FILS, LE NOIR AU NOIR ET LE BLANC AU BLANC. ATTACHER LE FIL DE MISE-A-TERRE AUX VIS DE MISE-A-TERRE DE LA PLAQUETTE.
4. ALIGNER LES TROUS SUR LE CANAPE AVEC LES VIS LONGUES DANS LA PLAQUETTE, ET PLACER LE CANAPE SUR LES VIS. SECURISER LE CANAPE AVEC LES ECROUS ET LES BOUTONS.
5. ACCROCHER LES FILS DE VERRE SUR LES ANNEAUX EN METAL.
6. SECURISER L'ABAT-JOUR A LA FIXTURE AVEC LES BOUTONS.

1976A